




SECTION A-A

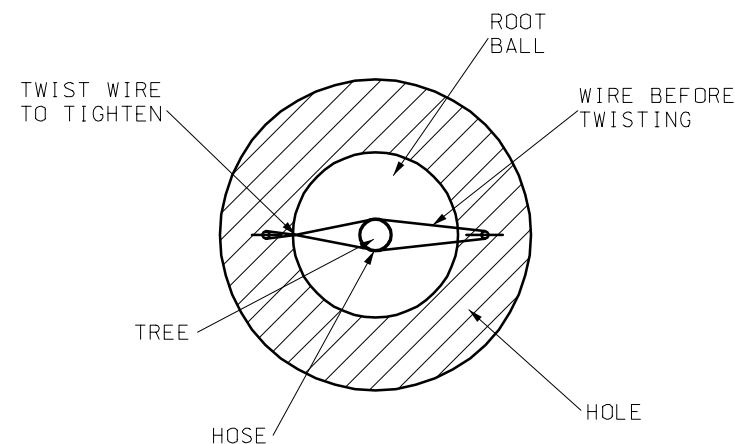

SECTION B-B

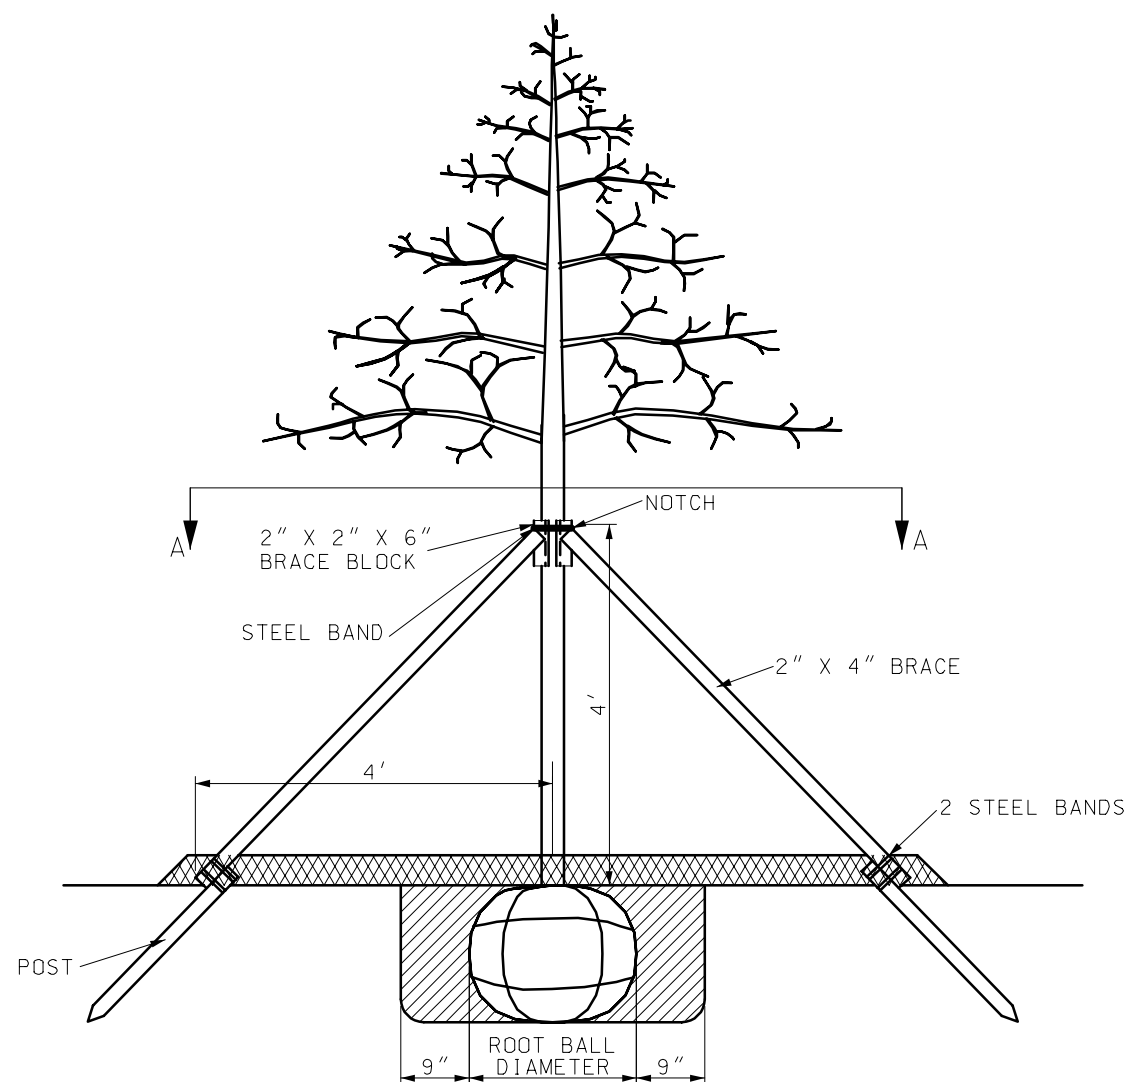

METHOD OF SUPPORTING DECIDUOUS TREES
3" CALIBER OR LARGER

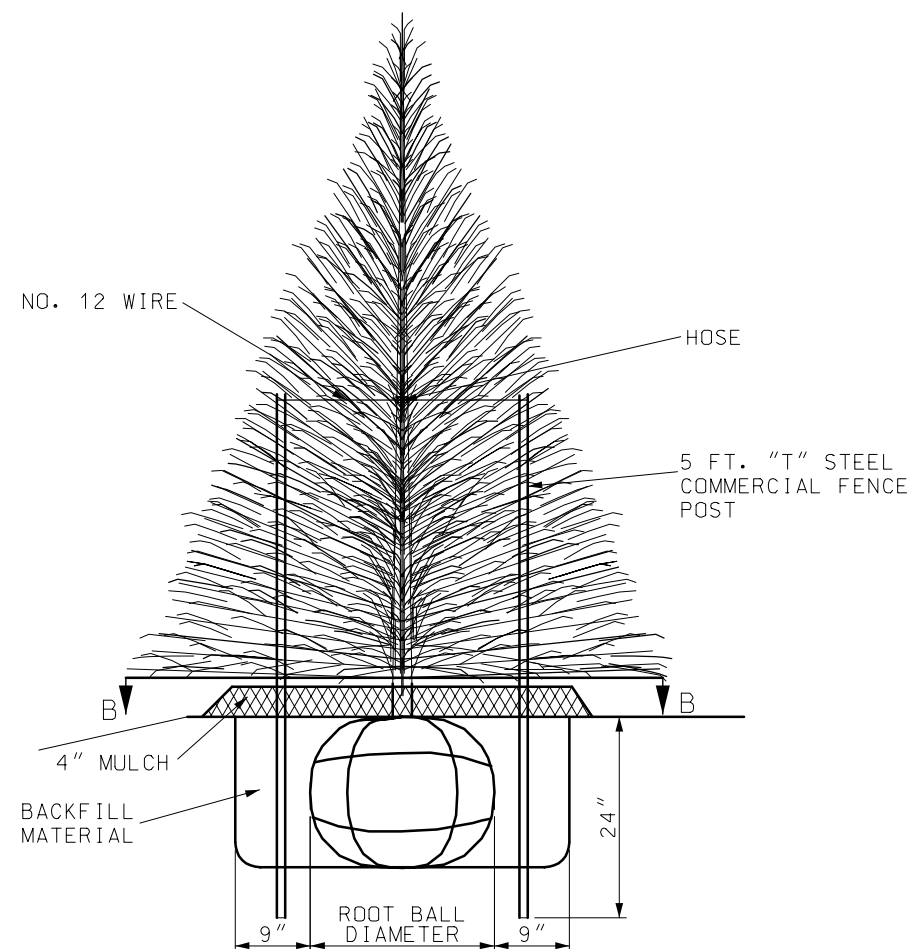

METHOD OF SUPPORTING EVERGREEN TREES
3' OR MORE IN HEIGHT


NOTES:

- TREE WRAP SHALL BE INSTALLED BEFORE BRACING.
- BRACE SHALL BE NAILED SECURELY TO POST AND BRACE BLOCK.
- BANDING SHALL BE DONE WITH A COMMERCIAL BANDING MACHINE.


GENERAL NOTE:

ALL NUMBER MEASUREMENTS ARE NOMINAL.

MISSOURI HIGHWAYS AND TRANSPORTATION COMMISSION			
TYPICAL PLANTING ILLUSTRATIONS METHOD OF SUPPORT			
DATE: _____	EFFECTIVE: 07-01-2004	808.00	1/3

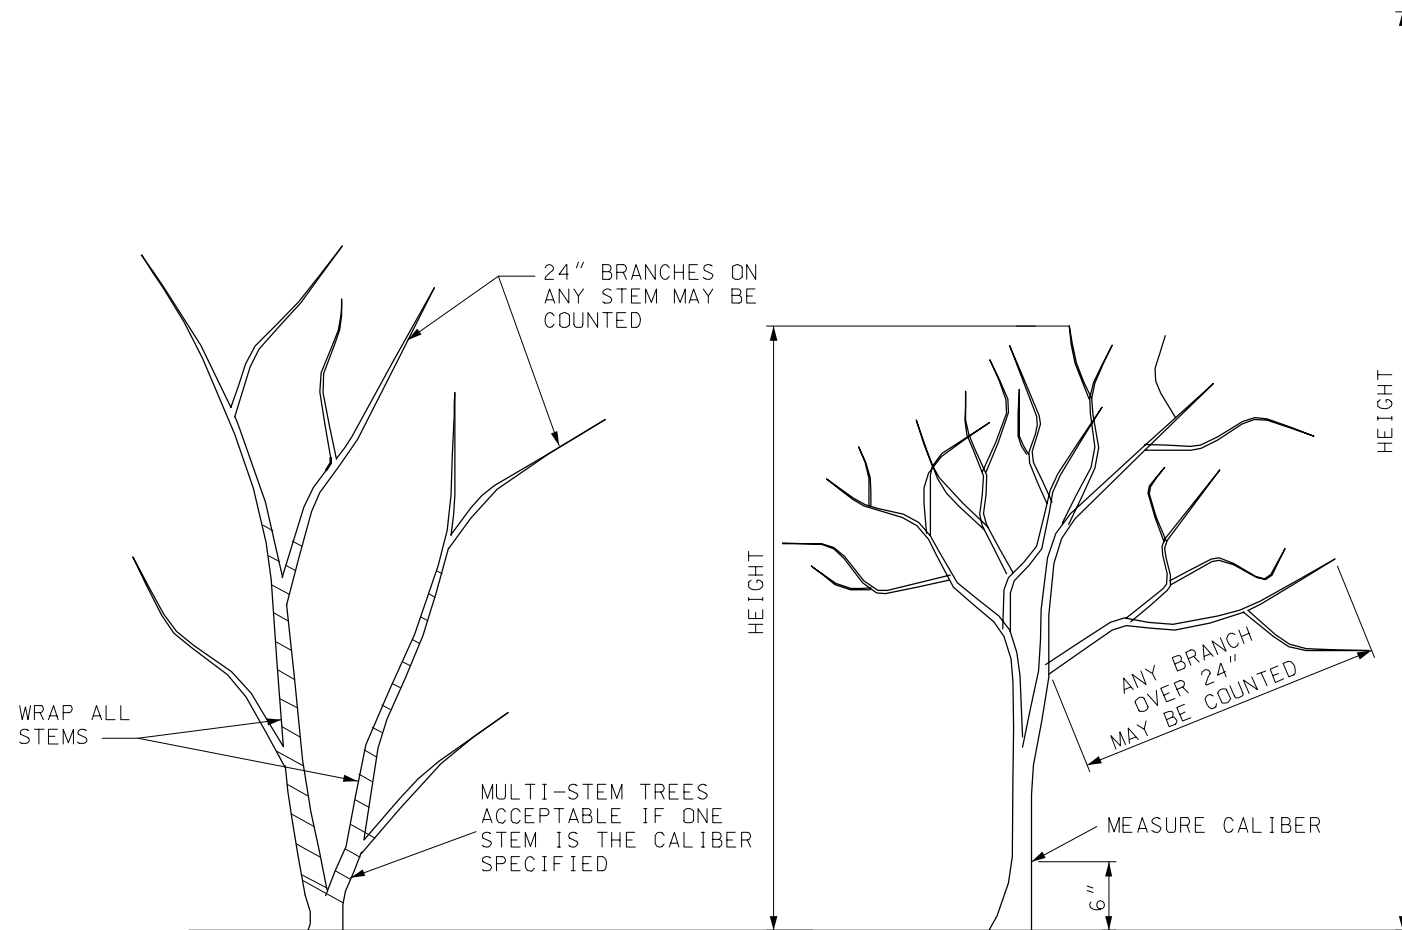


**MEASUREMENT OF
SMALL TREES**

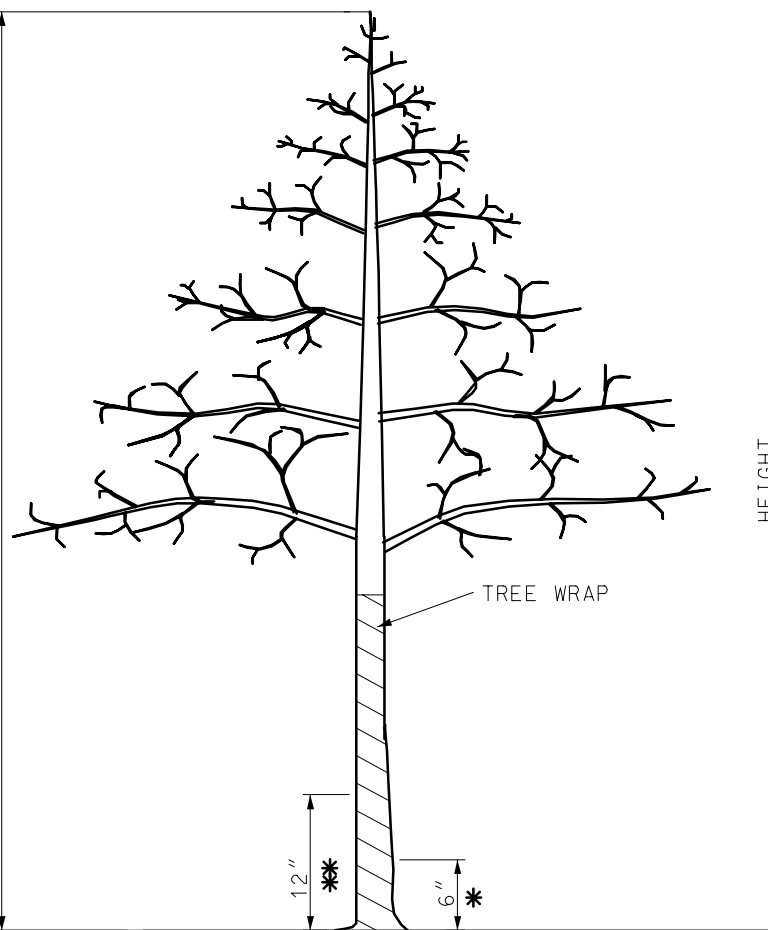


* MEASURE CALIBER FOR
TREES 4" OR LESS.
** MEASURE CALIBER
FOR TREES MORE
THAN 4".


**MEASUREMENT OF
LARGE TREES**

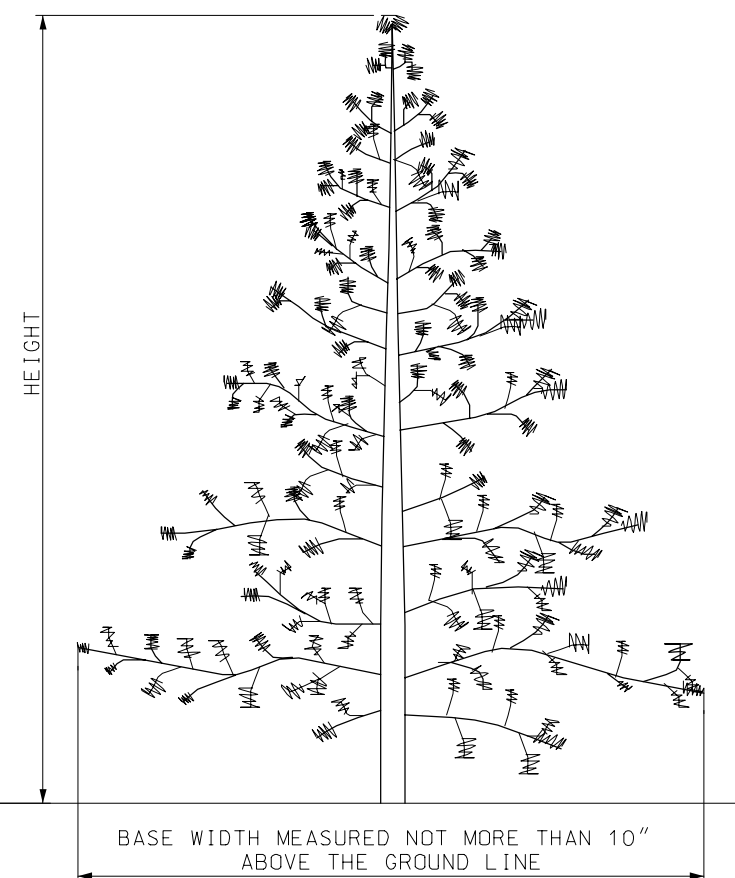

**MEASUREMENT OF
EVERGREEN TREES**


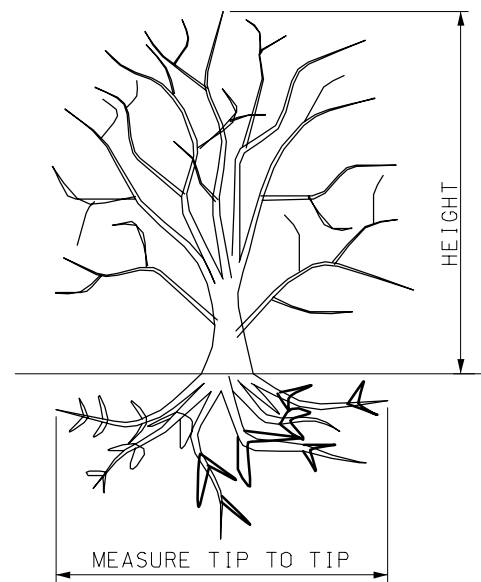


**MEASUREMENT OF
DECIDUOUS SHRUBS**

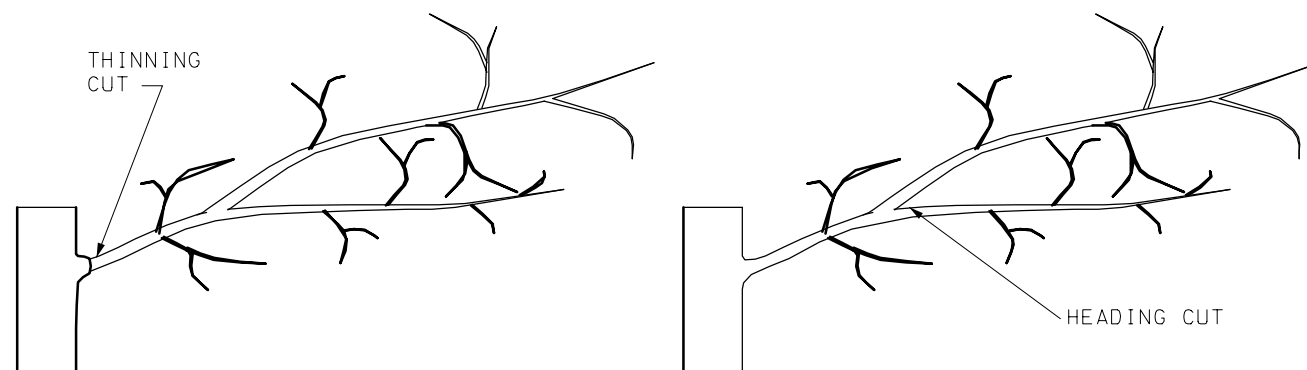


PRUNING CUTS


MISSOURI HIGHWAYS AND TRANSPORTATION COMMISSION			
TYPICAL PLANTING ILLUSTRATIONS MEASUREMENT AND PRUNING CUTS			
DATE: _____	EFFECTIVE: 07-01-2004	808.00	2/3

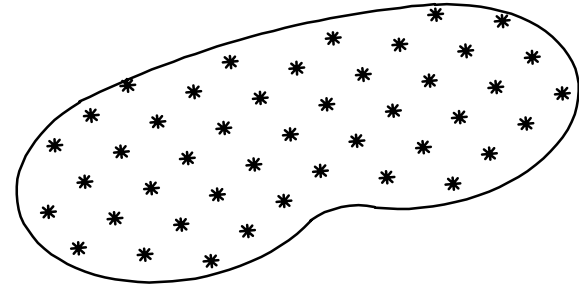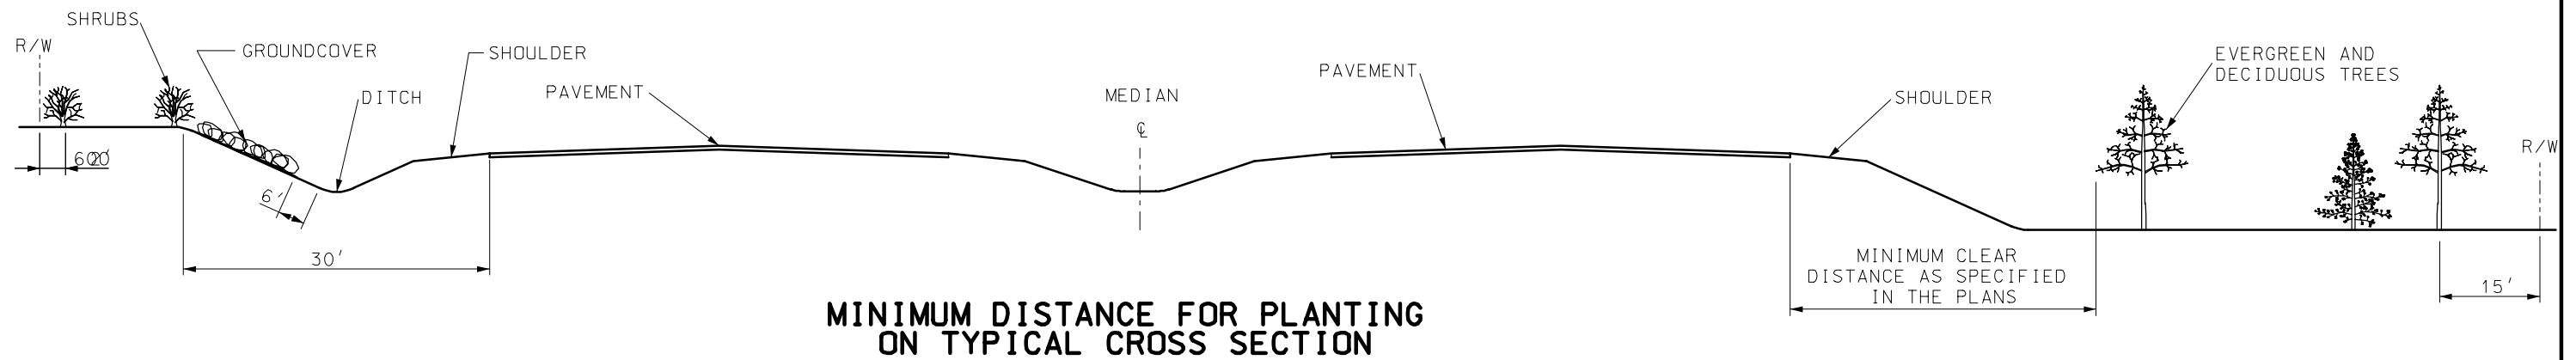


LOCATION OF SHRUBS IN A TYPICAL PLANT BED

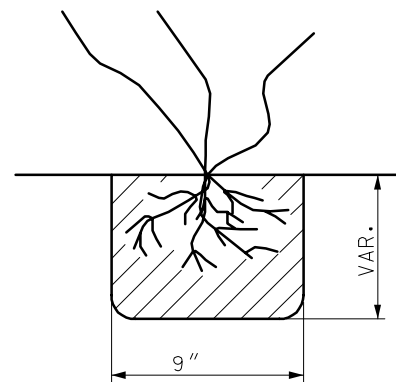

VINES AND SEEDLINGS

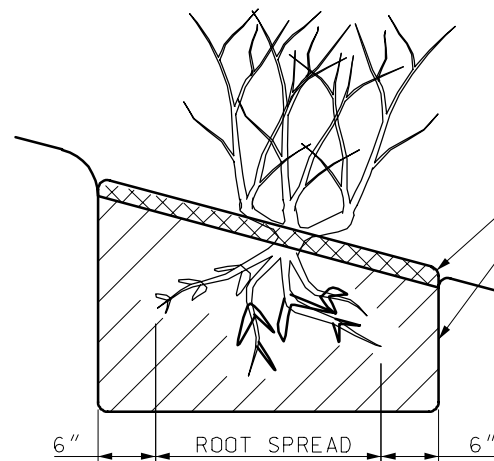

DECIDUOUS SHRUB SLOPE PLANTING

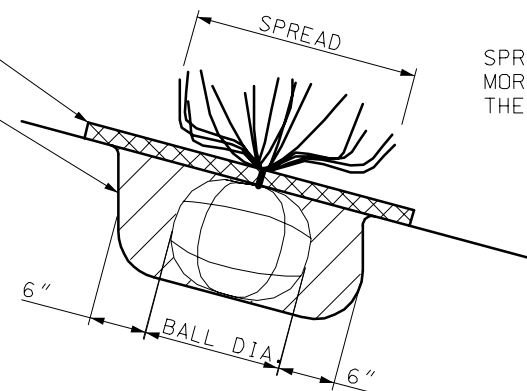

EVERGREEN SHRUB SLOPE PLANTING

MISSOURI HIGHWAYS AND TRANSPORTATION COMMISSION			
TYPICAL PLANTING ILLUSTRATIONS LOCATION AND SLOPE PLANTING			
DATE: _____	EFFECTIVE: 07-01-2004	808.00	3/3